 



AIR CIRCULATOR
USER MANUAL

CF-AC1410WH

CUCKOO

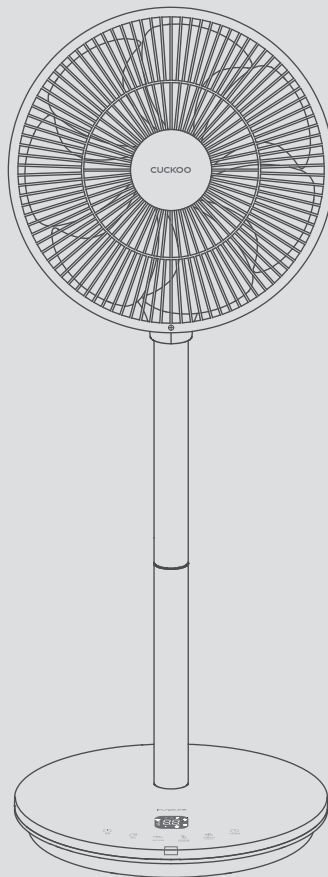

 
CUCKOO



CONTENTS

Before Using	● Important Safeguards	3~4
	Safety Precautions	5
	Parts & Accessories	6
	How to Assemble / Disassemble	7
Operation	● How to Use	8 ~ 9
	Remote Control	10
	How to disassemble	11 ~ 12
	How to Clean & Store	13
Before Requesting Service	● Troubleshooting	14
Service Guide	● Specifications	15

Avant d'utilizer	● Avertissement de Sécurité	16~17
	Précautions de Sécurité	18
	Structure et nomenclature	19
	Montage / Démontage	20
Fonctionnement	● Mode D'emploi	21 ~ 22
	Télécommande	23
	Démontage	24 ~ 25
	Nettoyage et Stockage	26
Avant de demander le service	● Dépannage	27
Guide de service	● Specifications	28

 

Important Safeguards

- Please comply with the following 'Safety Warning' to ensure safety and proper use of the product to avoid accidents or hazards.

WARNING

Potential hazardous situations that may result in death or serious injury if not avoided.

CAUTION

Potential hazardous situations that may result in minor injury if not avoided.



- This symbol is intended to alert the user about certain conditions that may cause a hazard.
- Please read carefully the instructions to avoid danger.



- This symbol is a sign that 'prohibits' a certain activity.



- This symbol is a sign that 'instructs' a certain activity.

 
WARNING

PROHIBIT

If the power plug or the power cord has been damaged or is shaking, stop using the product and contact the customer service center.

- If the sheath of the power cord has been stripped or damaged due to negligent use of product, it may lead to fire and electrocution. Please conduct frequent checks of the status of power cord, power plug, and power outlet.
- If the power plug or the power cord is damaged, replace the damaged part through the manufacturer, seller, or a qualified technician to prevent potential risk.
- You must repair the product through designated service centers.


When you are plugging in or pulling out the power plug, dry off your hands and pull or plug in by grabbing on to the main body of the adapter.

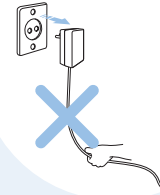


- Pulling with excessive force may result in power cord issues which may lead to short circuit and electrocution.
- If the power plug or the power cord is damaged, replace the damaged part through the manufacturer, seller, or a qualified technician to prevent potential risk.

Stop operating the product in a closed space or during sleep.

 - Using the product for a prolonged period of time may result in hypothermia or sickness from overexposure to air conditioning.

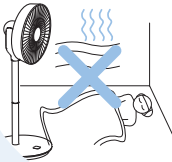

 
Do not place your hand or other foreign substance inside the safety net while the product is operating.

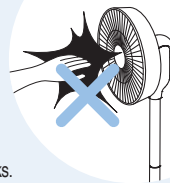

- The rotation may injure your fingers and the blades may be damaged, which may lead to other potential risks.
- Exercise special caution for children to prevent them from placing their fingers inside the safety net.


Do not use the product in the state where the blades, safety net, or other parts of the product have been damaged.

 - This may result in equipment failure or safety accidents.

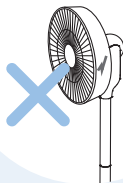

If the product has been disassembled, do not connect power until the blades and safety net have been assembled completely.

 - Safety accidents may occur if the product is not fully assembled.
- This may result in fire, electrocution, or injury (wound).






PROHIBIT


If you detect any strange noise, odor, or smoke during use, disconnect the power immediately and contact the customer service center.

 - This may result in electrocution or fire.

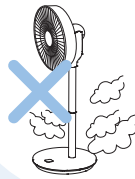


Do not use the product in a location where chemical substances, gas stoves, electric heating appliances, and other similar objects are present.

 - This may result in fire or equipment failure.
Gas leak from a gas stove turned off may especially result in explosion upon activation of the product.

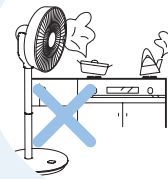


Only the service engineer is permitted and qualified to disassemble or repair the product.

 - Contact the customer service center.




Do not place a heavy object on top of the power cord or let the power cord get pressed down on the floor.

 - This may result in fire, electrocution, or injury.

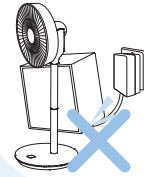

Do not place the power cord or the product near a heating appliance.

 - This may result in fire or electrocution caused by melting of the power cord sheath.
- The product may go through deformation or discoloration.

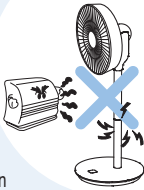


This device was not manufactured to be operated by a person who cannot safely operate the device without supervision or instruction due to absence of physical, sensory, or mental capacity, or lack of experience or knowledge (including children).

- Do not let children play with the device.



Do not excessively bend, tie, or pull on the power cord or the power plug.

 - This may result in fire caused by electrocution or short circuit.

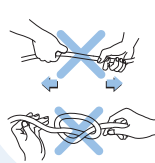


Use the device on a flat surface in a dry location.

- If the floor surface where the product has been placed is not even or at a slope, the product may fall over and result in equipment failure or injury.




 Using an adapter with incorrect specifications may result in motor failure, electrocution, fire, or safety accident.

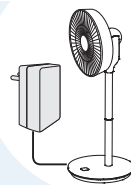


If there are any foreign substances or moisture on the power plug, separate the power plug from the power outlet and wipe it off clean with dry cloth.

  - This may result in fire, electrocution, or injury.

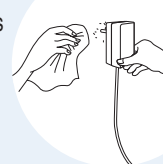






Parts & Accessories

 Parts

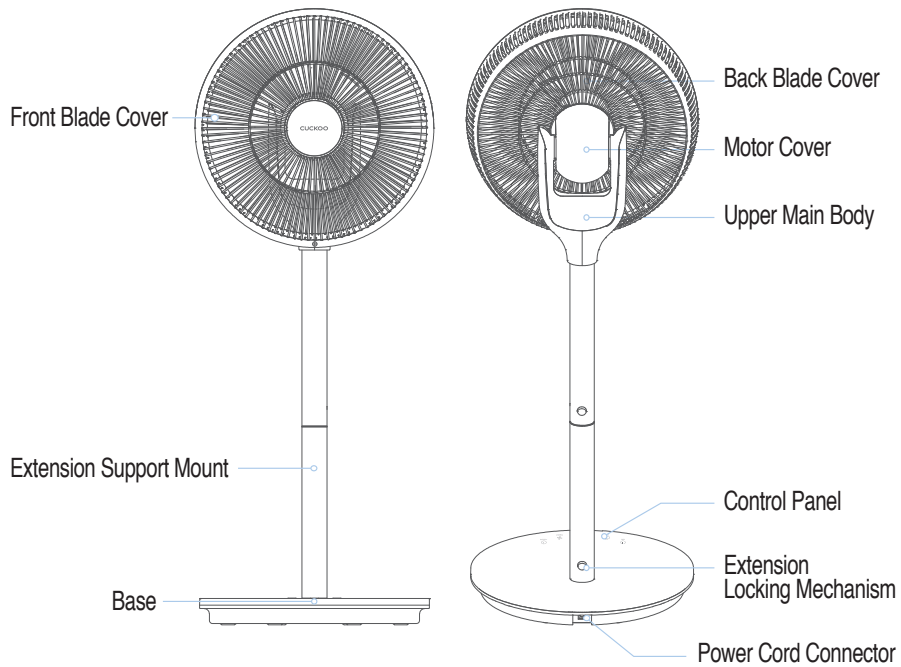

Accessories



 
Manual



Remote Control



Power Cord



How to Assemble / Disassemble

 


CAUTION

- Do not attempt to assemble the product with the power cord plugged in as this may result in electrical shock or product damage.
- Do not apply excessive force or allow the product fall over during assembly.

1 Assembling the Base

Place the base on an even, stable surface.
Press the button found on the pipe in before inserting the extension support mount.

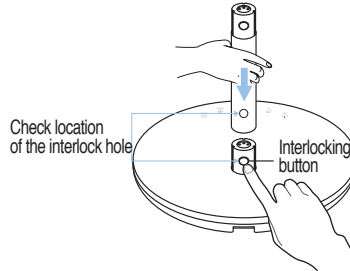


2 Assembling the Fan

Assemble the upper part while pressing the interlocking button on the support mount.
Use both hands to assemble to make sure that the product does not fall over during assembly.


Connect the upper part to the base if the middle support mount is not used.

 
Attach the remote control to the magnet found on the motor cover.

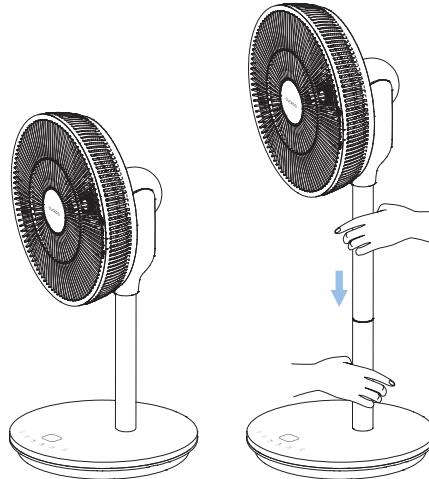


3 Connecting the Power Cord

  Connect the power cord to the power cord connector found on the base of the unit.
* This product requires an adapter during use.

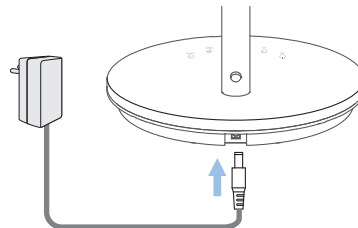



How to Use

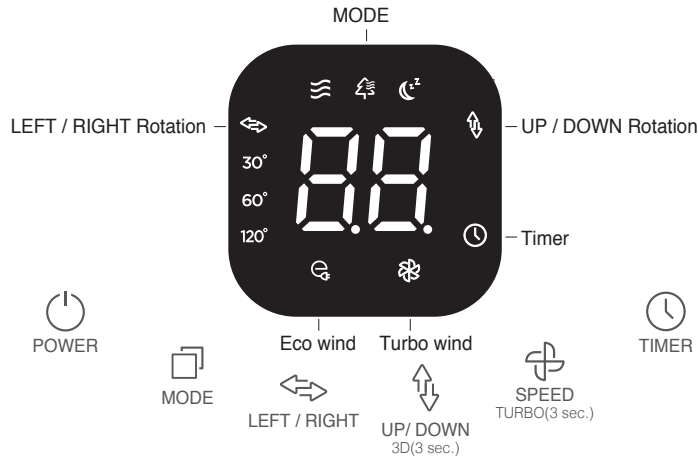 

ON / OFF

Press this button to power the unit on or off.



MODE

WIND MODE SELECT

Press this button to select the desired mode: (Basic ► Natural ► Sleep ► Eco)



Basic : Provides a consistent level of wind.



Natural : It adjusts the wind repetitively from the set wind level to the weaker level.



Sleep : The wind speed is decreased by 1 level from the set wind level to the weaker wind level every 8 minutes and the wind level is maintained after reaching level 1.

Ex) When setting up Level 3 (Operation Time (per level): 8 min.)

 
Level 3(8 min.) → Level 2(8 min.) → Level 1(continuous operation)




Remote Control



- 1) The configuration panel getting warm during operation and after operation is due to standby power consumption and not an equipment failure so it is safe to use.
- 2) Remove the battery protective film before use (there is a protective film in the packaging).

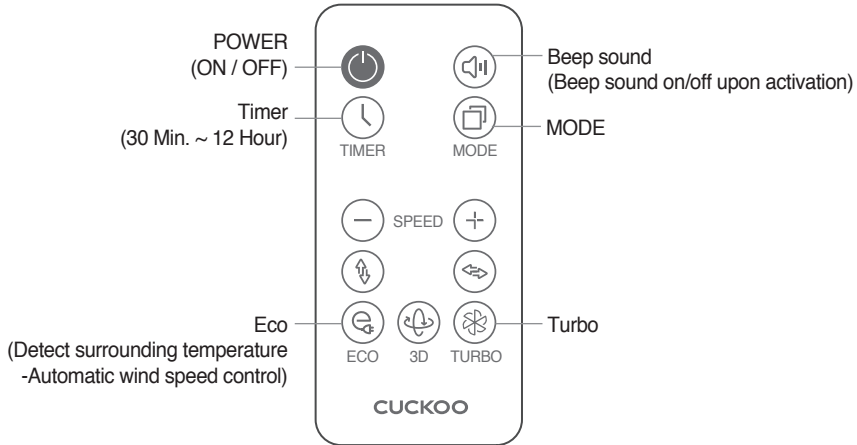



- * Point the transmitter of the remote control towards the receiver on the main body.
(Transmission distance: Approximately 5m from the receiver on the main body)
- * Do not press the buttons on the remote control in succession. This may result in malfunction.
- * Do not drop the remote control or apply excessive force.
- * Use batteries with matching specifications and store the remote control with the batteries removed when it's not being used for a prolonged period of time.
- * Attach the remote control on top of the motor for storage.
(There is a built-in magnet which can attach itself to the product.)

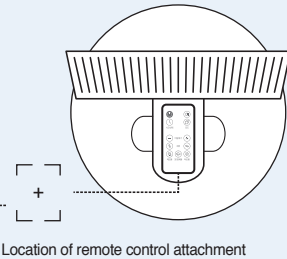 

How to Replace Batteries of the Remote Control

  - ➊ Push ➀ shown in the figure to the right in the direction of the arrow (right) and then pull ➁ in the direction of the arrow to remove the batteries.
- ➋ Install the batteries with the “+” area shown on top and then push to close the lid.
- ➌ Battery specifications: Use CR2025(3V) batteries.

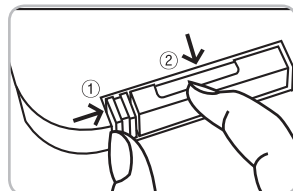



How to disassemble



 
CAUTION

Do not apply excessive force on the parts during disassembly.
This may result in product damage or injury.

1 Disassemble the screws fastening the safety net

Use a screwdriver to disassemble the screws at the bottom of the front safety net.

Be careful not to displace the screws after disassembly.

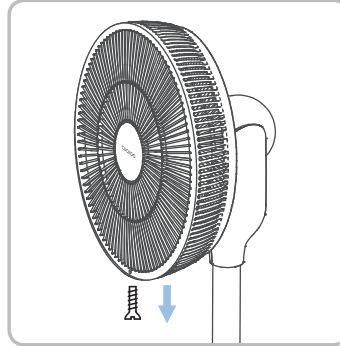


2 Disassembling the Front Net

Slightly turn the front net clockwise to disassemble it from the rear net.




 
During assembly:
Align the arrow shown in the figure above to face upwards and assemble.

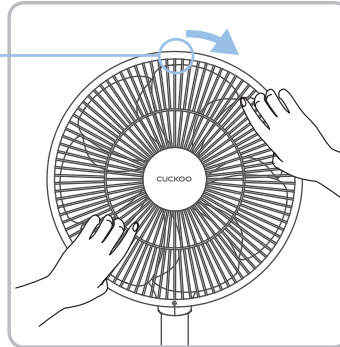

3 Disassembling the Blade Holder

  Slightly turn the blade holder clockwise to disassemble it from the rear net.

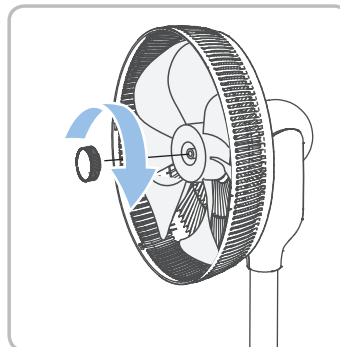





How to disassemble

4 Disassembling the Blades

Pull the blades forward from the motor axis to disassemble.

  Wear gloves to disassemble since blades may cause injury.

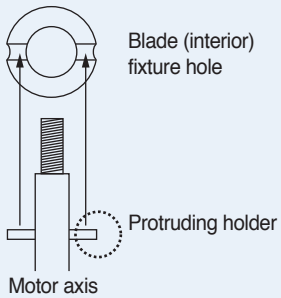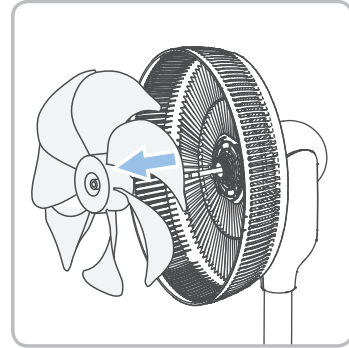


When assembling the blades:

When assembling the blades, align the protruding motor axis holder and the blade (interior) holder to assemble.


Incorrect fastening may result in device damage/destruction, or other performance issues.

5 Detaching the Net Holder/Rear Net

  Turn the net holder counterclockwise and then detach the rear safety net.

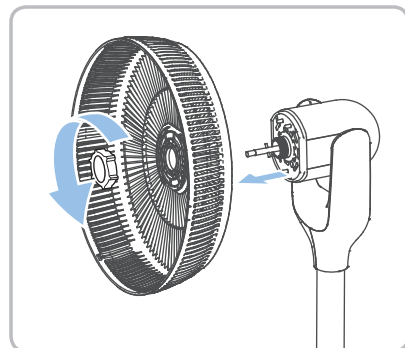





Troubleshooting

▼ If you are running into issues while operating the appliance, refer to the below troubleshooting chart. If the problem persists, email info@cuckooamerica.com.

Problem	Possible Causes	Corrective Action
The blades are not turning.	· Is the power plug plugged into the power outlet? · Is the power plug connected to the main body? · Are the blades being obstructed? · Is it past the time set on the timer?	· Check the connection status of the power plug, power outlet, and main body. · Contact the customer service center. · Turn off the power and try again.
The fan is not rotating.	· Is there a rotation icon on the display window? · Is there an issue with the motor?	· Please read the manual before use. · Please contact customer service.
There is a 'clicking' sound coming from the blades.	· Are the blades and safety net assembled correctly? · Is the safety net by any chance deformed and is in contact with the blade(s)? · Are the blade fixture bolts securely fastened?	· Please assemble the product again in the correct method. · Please fasten again the blade fixture bolts.
The remote control is not working.	· Have you installed batteries correctly inside the remote control according to their respective poles? · Is there an obstruction around the receiver on the main body? · Is the remote control too far away from the receiver on the main body by any chance? · Are the batteries depleted?	· Please check if the batteries have been installed correctly according to their respective poles. · Make sure that you have secured a line of sight with the receiver on the main body. · Use the remote control within 5 m from the receiver on the main body. · Install new batteries and try again.

► If the display window is blinking or the product is malfunctioning in a way not specified in the examples above, contact the customer service center immediately.




Appliance Name	Air Circulator
Model Number	CF-AC1410WH
Rated Voltage	120V / 60Hz
Adapter	* Input : 100-240V~, 0.8A Max, 50/60Hz * Output : 12Vdc , 3A
Power Consumption	35W
Dimensions	15.4 (W) x 14.8 (D) x 39.4 (H) inches
Weight	9.5 lbs. (including adapter)

Prolonged use of the appliance may lead to malfunction due to aging of components caused by heat, moisture, dust, etc.

If you experience such problems:

- ① Check the troubleshoot section found on page 14 to find a solution to your issue. If problem is not resolved contact the service center.
- ② You can feel the flow of electricity when touching the appliance.
- ③ The power is turned on but the appliance does not work.
- ④ If other abnormalities or breakdown occurs

 Please unplug the power and contact the service center.



Avertissement de Sécurité

- Please comply with the following 'Safety Warning' to ensure safety and proper use of the product to avoid accidents or hazards.
- This manual is classified into two types of instruction regarding 'Safety Warning': 'Warning' and 'Precaution'.

WARNING

Potential hazardous situations that may result in death or serious injury if not avoided.

CAUTION

Potential hazardous situations that may result in minor injury if not avoided.



- This symbol is intended to alert the user about certain conditions that may cause a hazard.
- Please read carefully the instructions to avoid danger.



- This symbol is a sign that 'prohibits' a certain activity.



- This symbol is a sign that 'instructs' a certain activity.

AVERTIR

 
Interdire

Si la fiche ou le cordon d'alimentation est cassé ou secoué, arrêtez son utilisation et contactez le service client.

- Si le couvercle du cordon d'alimentation est décollé ou est endommagé en raison d'une utilisation imprudente de l'appareil, cela peut provoquer un incendie et un choc électrique ; vérifiez donc fréquemment l'état du cordon d'alimentation, de la fiche d'alimentation et de la prise.
- Pour éviter tout danger, faites remplacer le cordon ou la fiche d'alimentation par un fabricant, un vendeur ou un technicien qualifié.
- Veillez à le faire réparer dans un centre de service agréé.


Veillez à ne pas utiliser l'appareil dans un endroit clos ou pendant votre sommeil.

- En cas de fonctionnement prolongé, vous risquez de faire baisser la température du corps ou de provoquer un syndrome de climatisation.

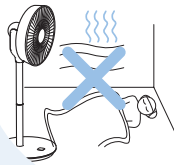


Ne l'utilisez jamais lorsque l'hélice ou la grille de protection sont endommagées.

 - Des défaillances et des accidents de sécurité peuvent se produire.

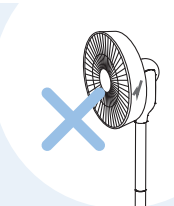

 Lorsque vous branchez ou débranchez la fiche d'alimentation, veillez à éliminer l'humidité de vos mains et à tenir le boîtier de l'adaptateur pour le brancher ou le débrancher.

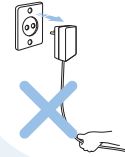


- Si vous le tirez trop fort, vous risquez de provoquer un court-circuit ou un choc électrique en raison d'une anomalie du cordon d'alimentation.
- Pour éviter tout danger, faites remplacer le cordon ou la fiche d'alimentation par un fabricant, un vendeur ou un technicien qualifié.

Ne mettez pas les mains ou des substances étrangères dans la grille de sécurité pendant le fonctionnement de l'appareil.



- Vous risquez de vous blesser le doigt ou de casser l'hélice à cause de sa rotation d'où le danger.
- Assurez-vous que les enfants n'y mettent pas leur doigts.

 
Si l'appareil a été démonté, ne branchez pas l'alimentation avant d'avoir assemblé complètement l'hélice et la grille de protection.



- Vous risquez un accident de sécurité s'il n'est pas entièrement assemblé.
- Cela peut provoquer un incendie, un choc électrique et des blessures corporelles.



 2022. 10. 26. 오후 12:05



Précautions de Sécurité



 
AVERTIR



Interdire


Veillez à ce que de l'eau ou des substances étrangères ne pénètrent pas dans le boîtier de l'appareil.

- Cela pourrait provoquer un court-circuit, un choc électrique et un incendie.
- Si de l'eau ou des substances étrangères pénètrent dans le boîtier, éteignez l'interrupteur du boîtier, retirez la fiche d'alimentation de la prise et contactez le service client.

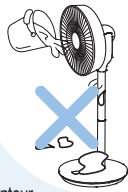

Ne pas utiliser dans des endroits chauds (104°F), humides (plus de 80 % d'humidité) ou poussiéreux.

 - Cela pourrait provoquer un court-circuit, un choc électrique et un incendie.

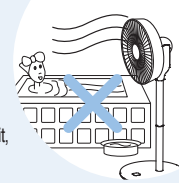

Ne placez pas de serviettes ou d'essuie-mains sur la grille de sécurité ou sur le capot du moteur pendant son utilisation.

- Cela peut provoquer une panne ou un incendie.



 
Lorsque vous touchez l'appareil à la main, ne forcez pas sur la partie rotative.

- Cela entraîne une panne.
- Cela peut causer des blessures et des préjudices corporels.



Ne l'utilisez pas à proximité d'objets pouvant s'envoler facilement, tels que des rideaux.

- Cela peut perturber le fonctionnement de l'appareil et provoquer sa chute ou sa panne.

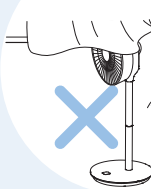


N'utilisez pas l'appareil en état de panne.

- Mettez l'interrupteur d'alimentation du boîtier sur arrêt, retirez la fiche d'alimentation et contactez le service client.




Veillez à ne pas utiliser l'appareil à la lumière directe du soleil ou à ne pas le tacher avec des produits chimiques, des huiles, des pesticides, etc.

 - Cela entraîne une déformation de l'apparence et une décoloration.

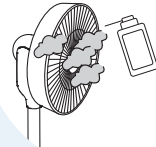


Débranchez l'adaptateur de la prise si en cas d'absence ou de non-utilisation de longue durée.

 - Un choc électrique ou un court-circuit peut provoquer un incendie.

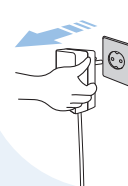


 Ne changez pas de force la direction du ventilateur pendant que le produit fonctionne. Faire va endommager le moteur.



Structure et nomenclature

 Structure et nomenclature

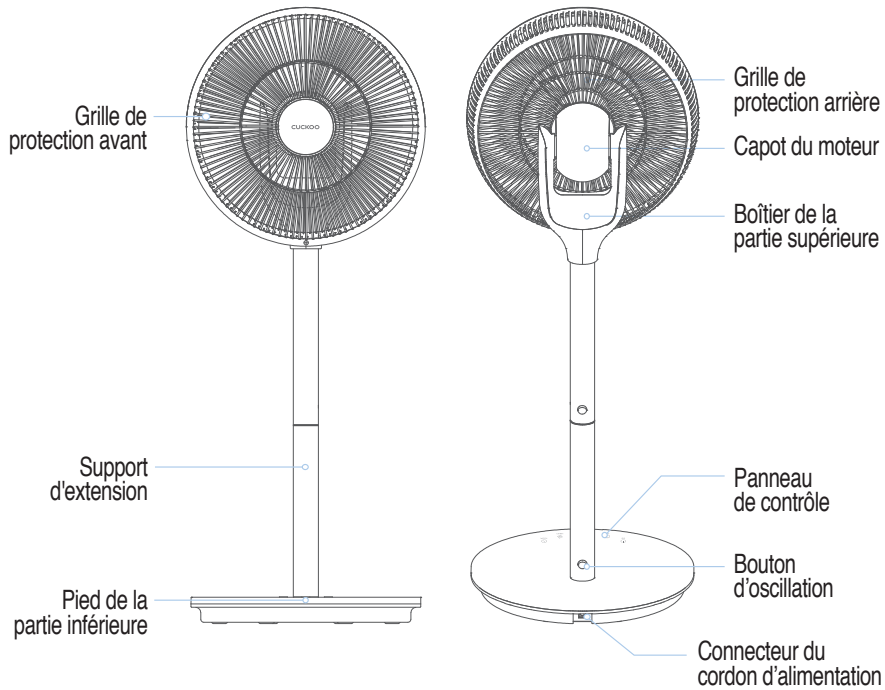

Accessories



Manuel de l'utilisateur



Télécommande



cordon d'alimentation



 
Montage / Démontage



- Ne pas assembler l'appareil lorsque l'adaptateur est connecté. Cela peut provoquer un choc électrique.
- Veillez à ne pas percuter ou faire tomber l'appareil pendant le montage.

1 Montage de la partie inférieure

Placez le pied sur une surface stable et plane. Appuyez et maintenez le bouton poussoir de fixation situé à l'arrière de la borne de fixation pour fixer le support.

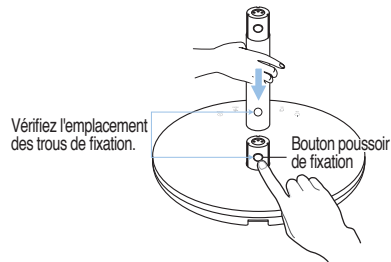


2 Montage de la partie supérieure

Appuyez et maintenez le bouton poussoir de fixation sur le support et fixez la partie supérieure.

Utilisez les deux mains pour verrouiller l'appareil afin qu'il ne tombe pas.

Si le support d'extension n'est pas utilisé, raccordez la partie supérieure à la base.

 
Utilisez la télécommande en la plaçant à l'emplacement de fixation de l'aimant du capot du moteur.

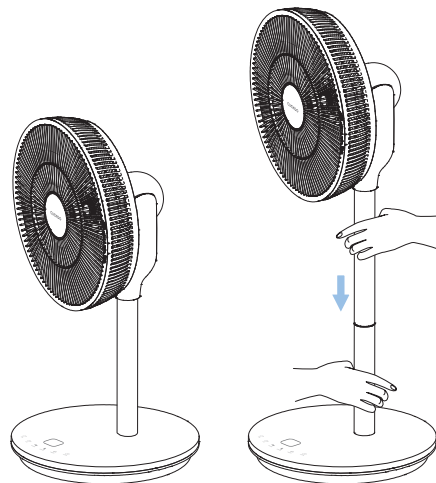


3 Raccordement du cordon d'alimentation (adaptateur)


Connectez le cordon d'alimentation (adaptateur) au connecteur du cordon d'alimentation à l'arrière du pied lorsque l'appareil est entièrement assemblé.

  * Cet appareil est conçu uniquement pour les adaptateurs.

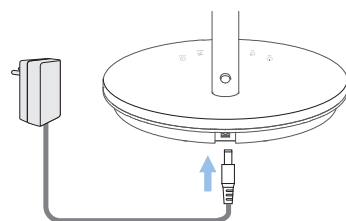



Mode d'emploi

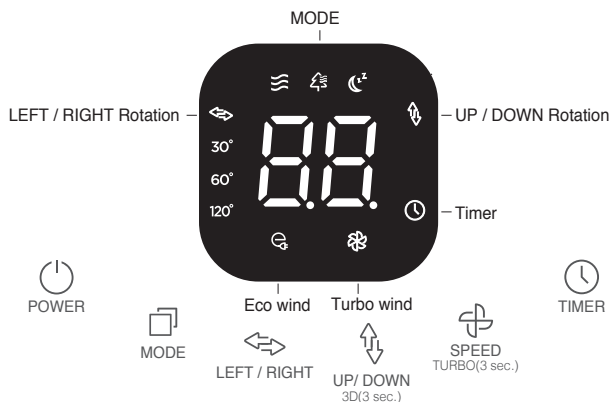 

ON / OFF

Appuyez sur le bouton d'alimentation pour lancer le vent à la vitesse par défaut de 6, et appuyez dessus pour arrêter son fonctionnement.



WIND MODE SELECT

appuyez sur le bouton pour sélectionner le mode (Basic ► Natural ► Sleep ► Eco)



Vent normal : Il génère un vent constant.



Vent naturel : Il est réglé à répéter du niveau du vent défini au niveau inférieur.



 
Mode sommeil : Du niveau du vent fixé au niveau inférieur, la vitesse du vent diminue d'un niveau toutes les huit minutes et reste la même lorsqu'elle atteint le premier niveau.

Ex) Lors de la mise en place du niveau 3

Level 3(8 min.) → Level 2(8 min.) → Level 1(fonctionnement continu)



Mode d'emploi




Speed	Stop	Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	Level 7	Level 8	Level 9	Level 10	Level 11	Level 12
Indoor temp	below 66.2°F	66.2°F 68°F	68°F 69.8°F	71.6°F 73.4°F	73.4°F 75.2°F	75.2°F 77°F	77°F 78.8°F	78.8°F 80.6°F	80.6°F 82.4°F	82.4°F 84.2°F	84.2°F 86°F	86°F 89.6°F	above 89.6

*Si la température est inférieure à 66.2°F, il marque "00" et s'arrête, et lorsque la température augmente, il fonctionne en indiquant le niveau réglé pour chaque température. (La puissance du vent peut varier en raison des écarts de détection de la température en fonction du milieu environnant.)




 Appuyez sur le bouton pour régler l'angle gauche et droit. Réglage initial est de 60°. Vous pouvez choisir parmi trois options : 30° / 60° / 120° qui s'affichent sur l'écran.

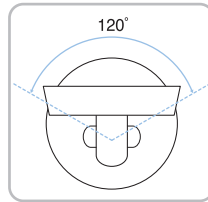

Il peut être utilisé simultanément avec l'oscillation horizontale.

 Upward : 85° / Downward : -15°

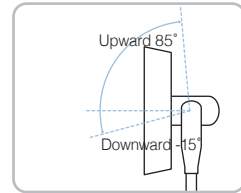

Appuyez sur le bouton pendant 3 secondes pour lancer automatiquement une oscillation vers le haut, le bas, la gauche et la droite.



Appuyez une fois sur le bouton pour régler la puissance du vent de 1 à 12.



 
Appuyez sur le bouton pendant 3 secondes pour passer au vent turbo. Pour le désactiver, appuyez sur le bouton de puissance du vent pour revenir au vent normal.



Appuyez une fois sur le bouton pour régler la minuterie jusqu'à 12 heures par tranche de 30 minutes. (Cependant, de 10 à 12 heures, De 6-12 heures, la minuterie est réglée par tranche de 1 heure).

Programmer le démarrage: Appuyez sur le bouton de la minuterie lorsque l'appareil est en arrêt pour programmer l'heure de mise en marche et la puissance du vent.

Programmer l'arrêt: Appuyez sur le bouton de la minuterie lorsque l'appareil est en marche pour programmer l'heure d'arrêt.




Télécommande




Attention

 - 1) Le réchauffement du panneau de commande pendant le fonctionnement et l'arrêt est dû à la consommation d'énergie de veille comme Micom, et ce n'est donc pas une défaillance, vous pouvez l'utiliser en toute confiance.
- 2) Retirez le film de protection de la batterie avant de l'utiliser (il y a un film de protection mis lors de l'emballage).

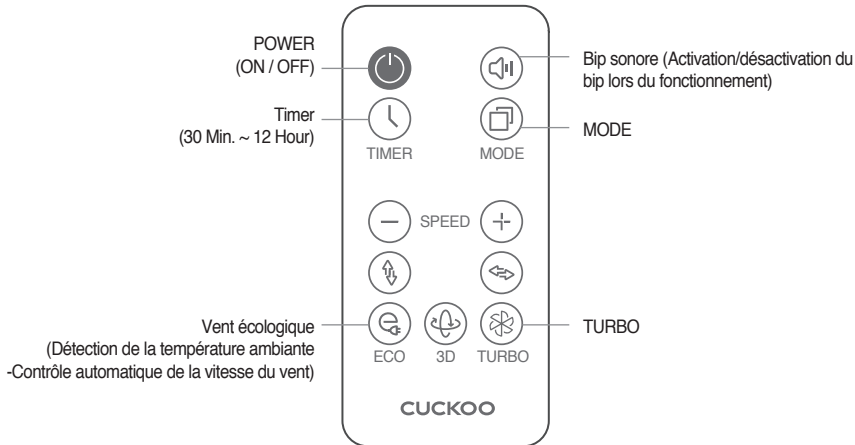


- * L'émetteur de la télécommande doit être orienté vers le récepteur du boîtier principal.
(Distance de réception : à environ 5 mètres du récepteur du boîtier principal.)
- * N'appuyez pas sur les boutons de la télécommande de manière continue. Cela peut entraîner un mauvais fonctionnement.
- * Ne faites pas tomber la télécommande et ne la soumettez pas à un choc violent.
- * Utilisez des piles conformes aux spécifications et retirez les piles si vous ne les utilisez pas pendant une longue période.
- * Pour ranger la télécommande, fixez-la sur le dessus du capot du moteur et rangez-la.
Elle peut être fixée car elle est munie d'un aimant intégré.

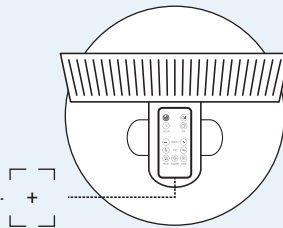 


Emplacement de la fixation de la télécommande

Remplacer la pile de la télécommande

  - 1 Comme indiqué sur l'image à droite, poussez ① en direction de la flèche (droite) et tirez ② en direction de la flèche.
- 2 Insérez la pile de manière à ce qu'on puisse voir le côté + vers le haut et poussez le couvercle pour fermer.
- 3 Spécifications de la pile : Utilisez la spécification CR2025 (3V).

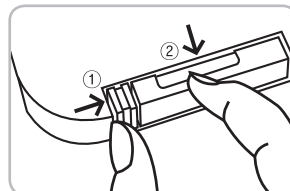







Démontage

4 Séparation de l'hélice

Tirez l'hélice vers l'avant de l'arbre du moteur pour la séparer.

  Portez des gants avant de la retirer car vous risquez d'être blessé par l'hélice.

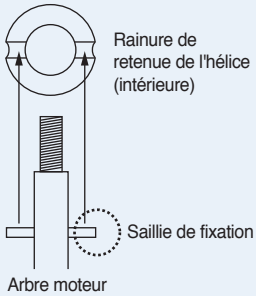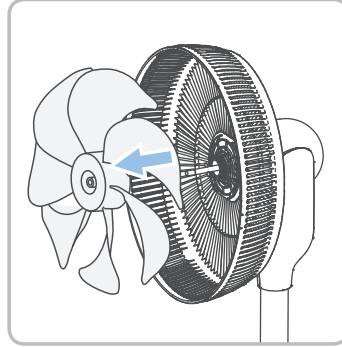


En cas de l'assemblage de l'hélice

Lors de l'assemblage de l'hélice, alignez la saillie de fixation de l'arbre moteur et la rainure de fixation de l'hélice (intérieure).

Si vous ne les fixez pas correctement, vous risquez d'endommager l'appareil et de rencontrer des problèmes de fonctionnement.

5 Retrait de la fixation de la grille / Retrait de la grille arrière

 Tournez la fixation de la grille dans le sens inverse des aiguilles d'une montre pour la retirer et retirez de la grille de sécurité arrière.

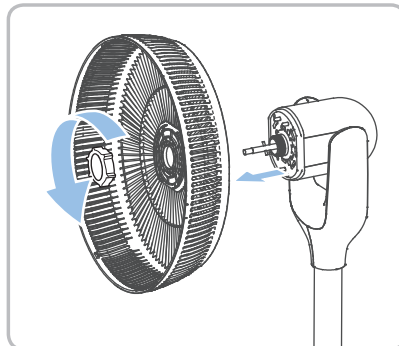





Si le fonctionnement de l'appareil est anormal, contrôlez-le selon la liste de contrôle ci-dessous et, le cas échéant, contactez le bureau du service client.

problème	point de contrôle	Solution
L'hélice ne tourne pas.	· La fiche d'alimentation est-elle débranchée de la prise ? · La fiche d'alimentation est-elle connectée au boîtier principal ? · La grille de sécurité n'est-elle pas bosselée et l'hélice n'est-elle pas coincée ? · Le temps programmé ne s'est-il pas écoulé ?	· Vérifiez la connexion entre la fiche d'alimentation, la prise et le boîtier principal. · Veuillez contacter le service client. · Arrêtez l'appareil et recommencez à l'utiliser.
Il n'oscille pas.	· Savez-vous comment le faire fonctionner ? · L'icône d'oscillation est-elle présente sur la fenêtre d'affichage ? · Y a-t-il un problème avec le moteur ?	· Apprenez à l'utiliser avant de l'utiliser.
J'entends le claquement de l'hélice.	· L'hélice et les grilles de sécurité sont-elles correctement assemblées ? · La grille de sécurité n'est-elle pas bosselée et l'hélice n'est-elle pas coincée ? · L'écrou de fixation de l'hélice est-il bien fixé ?	· Réassemblez l'appareil correctement. · Resserrez l'écrou de fixation de l'hélice.
La télécommande ne fonctionne pas.	· Avez-vous placé la pile de la télécommande en respectant la polarité ? · Le récepteur principal est-il couvert ? · N'est-elle pas éloignée du récepteur principal ? · Les piles ne sont-elles pas épuisées ?	· Assurez-vous que la pile est placée selon sa polarité. · Faites en sorte que le récepteur de boîtier soit visible. · Utilisez-la à moins de 5 m du récepteur de boîtier principal. · Insérez une nouvelle pile et l'utilisez.

► Si le voyant clignotant ne concerne pas les questions ci-dessus ou si l'appareil fonctionne anormalement, veuillez contacter le centre de clientèle sans délai.



Nom de L'appareil	Air Circulator
Numéro de Modèle	CF-AC1410WH
Tension Nominale	120V / 60Hz
Adaptateur	• Input : 100-240V~, 0.8A Max, 50/60Hz • Output : 12Vdc , 3A
Consommation D'énergie	35W
Dimensions	15.4 (W) x 14.8 (D) x 39.4 (H) inches
Poids	9.5 lbs. (including adapter)

Demandes de réparation

L'utilisation prolongée de l'appareil peut entraîner un dysfonctionnement dû au vieillissement des composants causé par la chaleur, l'humidité, la poussière, etc.

 
Si vous éprouvez de tels problèmes :

- ➊ Consultez la section de dépannage trouvée à la page 29 pour trouver une solution à votre problème. Si le problème n'est pas résolu, contactez le centre de service.
- ➋ Vous pouvez sentir le courant électrique quand vous touchez l'appareil.
- ➌ L'alimentation est allumée mais l'appareil ne fonctionne fonctionne pas.
- ➍ S'il y a d'autres anomalies ou défaillances.




Arrêtez d'utiliser l'appareil.


Veuillez débrancher l'alimentation et contacter le centre de service.



MEMO

 

MEMO

 

MEMO

