

# 8 FOOT INFLATABLE COLOR CHANGING IGLOO FORT

## Instruction Manual

HS SKU# 56865

Item# IF531

### PRODUCT DESCRIPTION

The set includes an inflatable 8 foot long by 6 foot tall igloo fort with built-in UL DC blower (1.5A) and inflates in less than 5 minutes. This inflatable Igloo is a fun and attractive outdoor play fort for snowball fighting game in the backyard for children age 5 to 12 years old. It can hold approximately 4 to 5 small children. Made of 190T nylon, the igloo exterior is printed with brick lines, giving it an appearance of stacking ice bricks. Children can bring their snowball "ammunition", enter the igloo from the 3-ft high tunnel and throw snowball through the circular 24"x26" window from the fort. Installed with built-in disco light with on/off switch, the igloo fort displays a mesmerizing color changing lightshow at night. Designed to be plugged into AC power outlet (110-120V, 60 Hz) with 6 foot cable and UL certified DC adapter, the igloo is a seasonal constant air inflatable. 8 sturdy ground stakes and 4 tethers are included to secure the inflatable. Inflated size 96"L x 78"W X 68"H approximately. Carton box dimension 12.6" x 11.8" x 11", weight 7 LBS.

**AGE 5 – 12 YEARS**





**PLEASE READ CAREFULLY BEFORE SETTING UP THIS PRODUCT. FOLLOW ALL SAFETY AND OPERATION INSTRUCTIONS IN THIS MANUAL. SAVE THIS MANUAL FOR FUTURE USE.**


## IMPORTANT SAFETY INSTRUCTIONS – ELECTRICALLY OPERATED PRODUCT


### DANGER – TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, CAREFULLY FOLLOW THESE INSTRUCTIONS

- READ AND FOLLOW ALL SAFETY INSTRUCTIONS
- Read and follow all instructions that are on the product or provided with the product.
- The power adapter is certified according to the relevant safety standards UL1310.
- The output power taken from the adapter must not exceed the rating given on the adapter.
- The adapter is not intended to be repaired by service personnel in case of failure or component defect (unit can be thrown away).
- The disconnection from line voltage is made by main plug.
- The adapter is intended to be correctly orientated in a vertical or floor mount position.
- For connection to a supply not in the U.S.A. use an attachment plug adapter of the proper configuration for the power outlet, if needed.

 **WARNING: Risk of Electric Shock.** Product has a direct plug-in adapter. When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the adapter connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

 **WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

 **WARNING: Risk of Electric Shock.** Mount the adapter at a height greater than 1 foot from the ground surface. Do not use blower with any solid-state speed control device. Unplug or disconnect the blower from the power supply before servicing.

 **DANGER**  
To prevent electric shock, do not immerse the blower in water, wipe clean with damp cloth. Do not operate blower with a damaged cord or plug. Discard blower or return to an authorized service facility for examination and/or repair.  
Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar covering. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

**SAVE THESE INSTRUCTIONS – This manual contains important safety and operating instructions for power units.**

ADAPTER PLUG: DC 12V, 2.0A, UL certified

AIR MOTOR: DC 12V, 1.5A

 **CAUTION - ELECTRICALLY OPERATED PRODUCT**

Operation of product is not recommended for children under 14 years of age.  
As with all electric products, precautions should be observed during handling and use to prevent electric shock.

MADE IN CHINA

## IMPORTANT SAFETY INSTRUCTIONS- SET UP

- Do not use this seasonal decoration product for permanent installation or use.
- Keep away from fire.
- Do not install product near swimming pool or power lines.
- Do not place near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- Do not secure the product wiring with staples or nails, or place on sharp hooks or nails.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other than its intended use.
- Do not hang ornaments or other objects from the cord, wire, or the inflatable.
- Do not close doors or windows on the cord wire as this may damage the wire insulation.
- Do not cover the cord or wire with cloth, paper or any material not part of the product when in use.
- Before using or reusing, inspect the product carefully. Discard any products that have cuts, damages or frayed wire insulation or cords, loose connections or exposed copper wire.
- Always unplug the product during set up.
- Do not connect extra light sets or any other electrical items to the existing light sets of this product. This will cause overloading and void the warranty.
- When storing the product, carefully unplug by grasping the plug and remove the product from wherever it is placed. Do not pull the cord to avoid any undue strain or stress on the product conductors, connections and wires.
- Do not use this product in windy (over 15 mph), heavy rain, heavy snow condition or when the ground is flooded. Product may become airborne under windy condition and endanger others. Store the product indoors under these conditions.
- To prevent electrical shock or damage to blower, do not immerse the inflatable or blower to water or snow.
- Keep children away from the cable, plug, ground stakes and tethers of the inflatable. Do not let children climb or hang on the inflatable.
- Keep pets off of the inflatable.
- Product should be plugged into GFCI protected AC power source.




**CHOKING HAZARD: Product contains small parts. Not for children under 3 years.**



**CAUTION - To avoid strangulation hazards, do not allow children to play with the tethers used for securing the inflatable.**

## CONTENTS

1 x inflatable with pre-hung LED light and built-in blower  
4 x tether ropes  
8 x 10" plastic ground stakes for inflatable  
Instruction manual

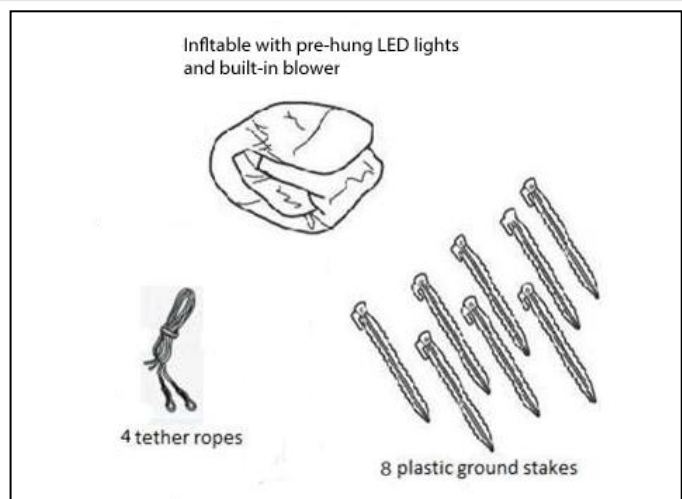

## SET UP

### CAUTION:

- Adult assembly required.
- Make sure the product is anchored with the provided tethers and ground stakes and the stakes are completely inserted into the ground. Ground stakes protruded from ground level are dangerous to children.
- Plug the cable away from play zone where children run around and may accidentally kick the electric cable or the power plug. Loss of power to the blower will cause deflation of the inflatable.
- Anchor the inflatable with ground stakes and tethers away from the play zone where children run around and may accidentally kick the tethers or the ground stakes. Loose anchors may cause instability of the inflatable.
- When installing outdoors, be sure the plug and connection joints are not in a location where water may accumulate and seep in at the joints.
- Keep the product away from water or water puddles. The product is water resistant but not waterproof.
- Keep the product away from dirt, leaves or other debris that can be sucked into the blower through the vent. Check blower vent regularly and remove any obstructions of airflow to the blower.
- DO NOT insert any foreign objects into the blower vent or pour any liquids into or onto the blower.
- DO NOT use in wet or windy condition (over 15 mph) or when the ground is flooded.
- Plug into GFCI protected 120V, 60Hz AC electrical outlet.
- Do not drag or pull the inflatable over the ground or any other hard surface.
- The inflatable will reach 8 feet long, 6.5 feet wide and 5.5 feet tall after inflation. Make sure it is set up in a location that has minimum clearance of 4 feet around the sides and back, 6 feet in the front and 2 feet above free of any obstacles. Overhanging tree branches, rocks, roof, nails or obstacles will damage the material.

### PRODUCT SET UP AND OPERATION:



**WARNING: Adult supervision is required for children playing in this inflatable. Please read instructions carefully. Proper use of this product can prevent damage or injury.**

**Inflatable dimension (after inflated): 8 feet length x 6.5 feet width x 5.5 feet height approximately**

**Lights: color changing disco light (LED) with on/off switch inside the pocket near the light**

**DC adaptor plug: Plug into AC power outlet**

**Input AC 110-120V, 60Hz. Output DC 12V, 2.0A (UL certified)**

**Built-in blower for constant air inflation: DC 12V, 1.5A (UL certified)**

**Power rating of product: 18W**


1. Choose a flat outdoor lawn area free of glass, rocks or other sharp objects that may rip/tear the inflatable material. Unpack product and all components in the desired area.
2. Minimum clearance for set up area of the inflatable including play zone: 8' H x 18' L x 14' W
3. Make sure the product is unplugged during set up.
4. Lay out the inflatable flat on a level ground and smooth out the folds of the fabric. Make sure the surrounding ground near the built-in blower is clear of debris, leaves, grass or loose rocks.
5. To prolong life of the inflatable, place a tarp underneath to protect the fabric from rubbing against the rough ground.
6. Close the zipper located in the back of the inflatable.

7. Clip the 4 tether hooks to the 4 nylon loops at mid height of the igloo (see diagram in the next page)
8. Plug into a GFCI power outlet (AC 120V, 60Hz). The product is designed to be plugged-in to keep it continuously inflated with the built-in blower.
9. The color change light will start immediately after plug-in. The light can also be controlled by the on/off switch in the pocket beneath the light. The igloo will be completely inflated in a few minutes.
10. Secure the 4 loops at the bottom of the inflatable and the end of the 4 tethers using the provided 8 ground stakes as indicated in the set up diagram below. Secure the ground stakes and tethers away from the play zone of the inflatable fort. Hammer the ground stakes below ground.
11. Make sure the snowballs thrown on the fort are not mixed with rocks, sand or any sharp objects as they will damage the fabric. They are also dangerous to the players.


## Stakes and tethers diagrams

### Ground stakes (plastic) and tether ropes setting:

Minimum clearance for the set up area of the inflatable: 18' L x 14' W x 8' H

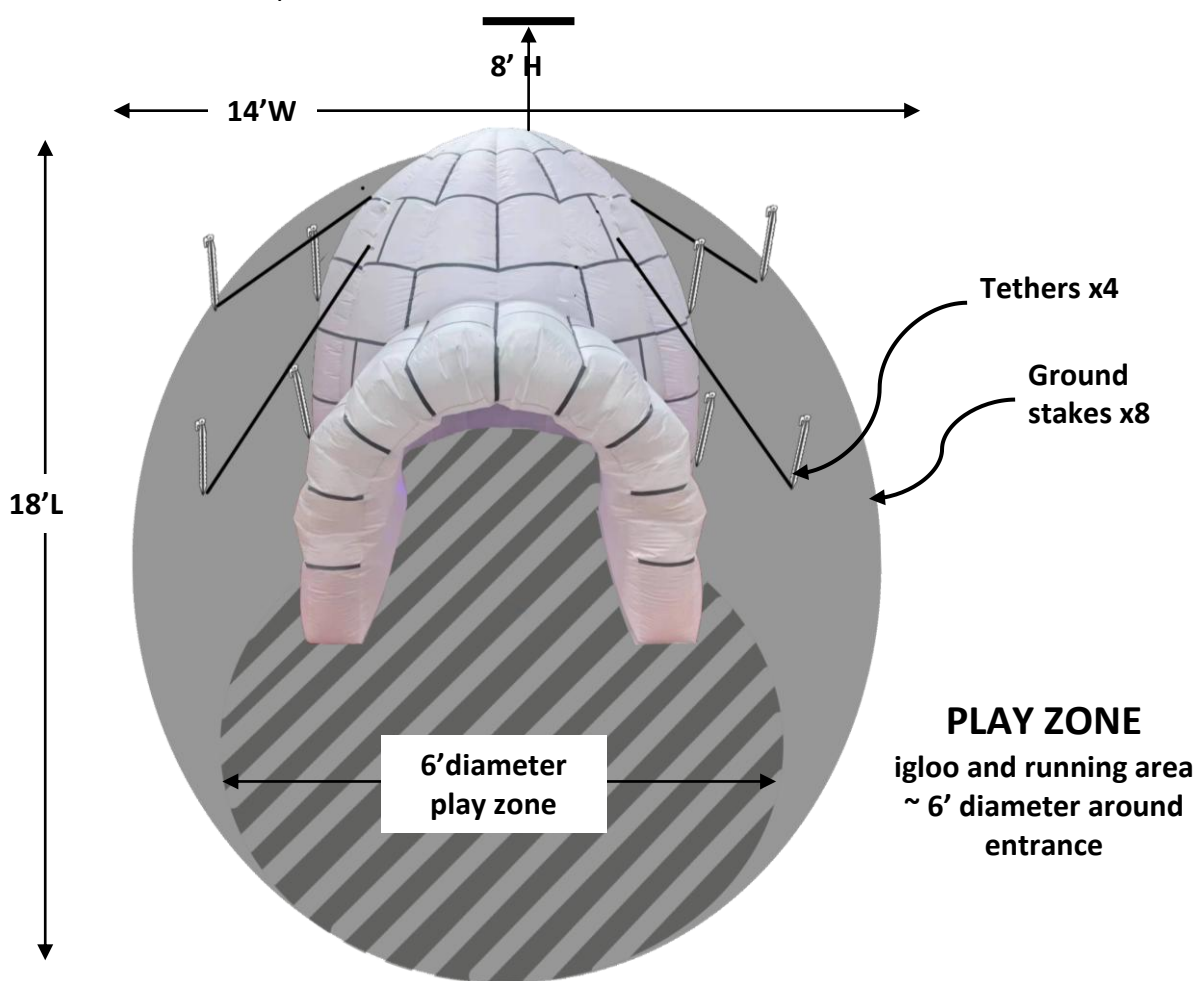

Clip tether hooks to 4 nylon loops located in mid height of the igloo

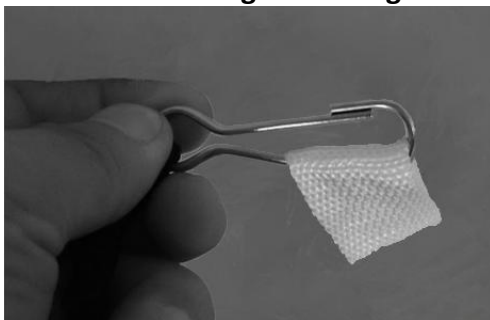

# USE, CARE AND MAINTENANCE

## CARE AND MAINTENANCE

- Turn off and unplug product before servicing.
- Check regularly for unsafe condition including damaged cord or plug. If damage is found, do not use the product until repaired.
- Check the inflatable regularly for signs of weak or torn fabric. Repair immediately by sewing if found.
- Regularly check if rainwater seeps inside inflatable, unzip the bottom and drain water completely from the inflatable. Make sure the blower is dry completely before use.
- Never immerse the product or the blower in water.
- Regularly check and clean up leaves or debris that may fall onto the inflatable or block the blower vents.
- When not in use, unplug and allow to deflate. Fold up the inflatable.
- Store neatly in a cool, dry location protected from sunlight.
- Always dry the inflatable thoroughly before rolling it up for storage. Mildew may develop if stored damp.
- To keep clean, simply wipe with a cloth dampened with water to clean the surface of the inflatable and the blower vent. Allow to dry.
- Do not use chlorine based or bleach cleaners as it may damage the threads.
- Do not clean the air blower with chemical solution as this may damage the coating and plastic parts.

## TROUBLESHOOTING

1. If your inflatable is not inflating, please check the following:
  - The power source is interrupted or the cord may be unplugged.
  - The main blower is not working.
  - The blower air flow may be blocked. Simply unplug and remove debris from the intake air vent.
  - The inflatable has holes that need repairing. Sew the tear or holes.
  - The zipper is not completely closed.
2. If the lights are not on while blower is on, please check following:
  - The on/off switch near the light is OFF
  - The string light connector at the adaptor plug is loose. Locate the connector at the plug and screw tight.
  - String light may be damaged and need replacement.

## CAUTION: PROP 65 WARNING

This product complies with all state and federal product safety standard and is safe when used as intended.

**California Prop 65 warning:** the electrical components of this product contains PVC coated wires and can expose you to chemicals including lead, which is known to the State of California to cause birth defects or other reproductive harm. Wash hands after handling. Keep children away from electrical components. For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

## FCC Part 15 Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## 90-DAY LIMITED WARRANTY

Worldtrade Promotion Co. LLC (WTP) warrants this Product against defects in material or workmanship to the original purchaser for a period of 90 days from the date of purchase. WTP reserves the right to inspect all warranty claims and make a final decision based on the validity of the claim. If this product is determined to be defective in normal usage within 90 days after purchase, WTP will repair or replace the product in whole or in part, at its option, at no cost to you. This warranty excludes freight in either direction, and freight is the responsibility of the consumer. Normal wear and tear including light bulb or fuse is not covered by the warranty.

This limited warranty shall not apply if:

1. the Product is not operated or maintained according to the instructions accompanied with the product;
2. the Product is subject to misuse or abuse, whether it is intentional, accidental or due to negligence;
3. the Product has cosmetic damage or damage due to acts of God;
4. the Product is repaired or modified by anyone other than servicing company designated by WTP;
5. the damage is due to connection to improper electric voltage supply or electric overload from additional electrical products;
6. the Product develops mold or mildew because it has been stored wet;
7. the Product is sold AS IS or WITH ALL FAULTS.

This limited warranty is available only to the original purchaser of the product and is valid only in the US. WTP shall not be liable for any damages beyond the purchase price of the Product. This warranty does not apply to non-defective returns of the Product. To obtain the warranty service, you must provide proof of purchase which evidenced the date is within 90-day warranty period, contact WTP Customer Service to report any defects, obtain Return Authorization Number and deliver the Product freight prepaid, with all original accessories in its original packaging according to the instruction provided. To expedite the processing of repair or replacement, in some circumstances, it may be necessary for you to send photographs of the product to WTP for evaluation.

**CONTACT:**

WTP Customer Service

Email: [customerservice@wtpco.com](mailto:customerservice@wtpco.com)

Phone: 1-888-2167322