



AUTO TAKE OFF



INDOOR/OUTDOOR



LIGHT MODE

WHIZZZCOPTER INSTRUCTION MANUAL


**LUMEZOOM
RC**

**WHIZZZ
COPTER**




 **Odyssey**
toys

Remote Control

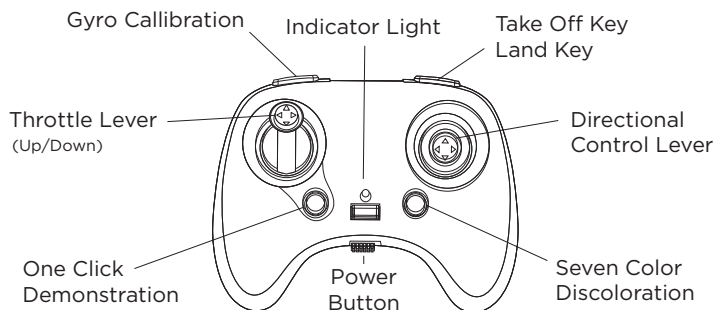

Batteries

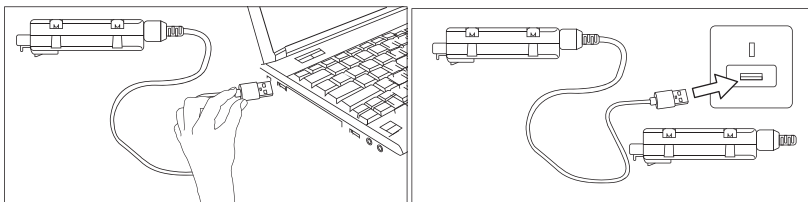

Charging the helicopter battery:

- Plug the provided charging cable into the helicopter battery.
- The indicator light will stay off while charging.
- When the indicator light turns on, the battery is fully charged. This will take around 45 minutes.
- Once fully charged the helicopter will run for 15-17 minutes.

Caution

- Only the original battery and charger (USB) can be used for charging.
- Do not leave unattended during charging.
- Keep the battery away from direct sunlight.

Changing the batteries of the remote control:

- Loosen the screws on the battery cover using a screwdriver.
- Load 3 x 1.5V AAA batteries (not included).
- Close the battery cover and tighten the screws.

Operating The Product

Connecting the helicopter to the remote:

1. Place the helicopter on a flat, clear surface. Make sure the helicopter is facing away from you. Turn ON the helicopter.
2. Turn ON the remote. The indicator light on the remote will keep flashing.
3. Push the left joystick to the highest position and then pull it straight down to the lowest position. The indicator light on the remote will then stop flashing.
4. Press the TAKE OFF button or push the left joystick and the helicopter will take off.

Cautions and Warnings

- An adult must be present for supervision and instruction during use.
- The user manual contains important information and should be preserved for reference.
- Only fly the helicopter in clear, open spaces. Stay away from obstructions, animals, people, power lines and buildings.
- Do not fly the helicopter in wet conditions.
- Do not expose the helicopter to direct heat, light or water sources.
- Do not cover the remote control to avoid interrupting the infrared connection.
- To clean the helicopter, only use a slightly damp cloth. Never use chemicals or alcohol.
- Store the helicopter in its original packaging or a cool, dry place.
- Do not attempt to disassemble or modify the helicopter.
- Make sure the helicopter has cooled down before charging it.
- If you do not intend to use the helicopter for an extended period of time, please charge the battery to 50% before storing.
- Suitable for ages 10+. Adult supervision is always recommended.
- This product contains small parts which are a choking hazard. Keep away from small children.
- Manufacturers and dealers disclaim all responsibility for damage caused by misuse.
- Keep hair and loose clothing away when powered on.
- If product will be stored and unused for an extended period of time, please remove the batteries.
- Remove exhausted or drained batteries.
- Do not place the unit near powerful, un-shielded magnets.
- Do not expose the unit to extreme hot or cold temperatures.
- Do not hit, drop, or smash the unit with extreme force.
- Do not disassemble the unit for any reason.

NOT FOLLOWING THESE PRECAUTIONS WILL VOID YOUR WARRANTY.



SCAN HERE

for more instructions, spares
and repairs, and more!

<https://odysseytoys.com/pages/manual-whizzcopter>

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Please do not return this product to the store.

For Customer Service please email: Care@OdysseyToys.com

Please note the units model number and name in your email:
Model no. ODY-05LZ • WhizzzCopter

www.odysseytoys.com/support

1-(305)-933-4480

Hours of operation: 10:00am - 5:00pm EST

60 DAY LIMITED WARRANTY

Odyssey Marketing / Odyssey Toys warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 60 days of the original purchase date with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty. During the warranty period, we will at our discretion, repair or replace this product without charge, as long as the product has not been abused or mishandled as by our determination. Our determination shall be final and be the consumer's sole remedy.

ALL RETURNS must be accompanied by a Return Authorization Number which is issued by Odyssey Marketing's Customer Service Department.

Please contact Customer Service BEFORE returning any products or parts thereof. Once you have obtained a Return Authorization Number, you will be provided a return address within the Customer Service email.

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire, or any acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modifications. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

**** THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS.****

©2024 Odyssey Toys LLC

