



DOOR ALARM™

Fits on any door to scare away intruders!

Agnes 6 and up

10535

SpyX Door Alarm

Requires Two AAA (LR03) batteries, not included.

Important: Please save this instruction sheet. It contains valuable product information.

TO OPERATE THE SPYX DOOR ALARM- Motion Detector

1. Attach the Door Alarm over the door knob of your door.
2. Turn the Alarm to the ON position (Fig. 1). The red LED will flash and after 3 seconds the Alarm is set and ready to go!
3. You can test the Alarm by twisting the door knob or by moving the Alarm back & forth a few times. The Alarm will sound through the speaker. After the Alarm sounds it will reset automatically.
4. Turn the Door Alarm off when not using it to make the batteries last longer

USING THE FLEXIBLE CABLE

When not in use, the flexible cable can wrap around the Alarm in storage mode (Fig. 3) or you can detach one end of the cable to wrap around door knobs, backpack loops or anything you want to protect. Slide the end of the flexible cable back into any one of the open slots on the Alarm body and then switch the Door Alarm to the ON position to set it.

Note that you can use the SpyX Door Alarm on any movable surface and if it detects motion the alarm will sound.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type are recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS:

TO INSTALL AND REPLACE BATTERIES (Fig. 2)

1. Requires 2 AAA (LR03) batteries, not included.
2. Use a small Phillips screwdriver to loosen the screw and remove battery compartment cover.
- NOTE: Screws will not detach from battery compartment cover.**
3. Place batteries in the compartment as shown.
4. Replace battery compartment cover and tighten screws.

Fig 1.



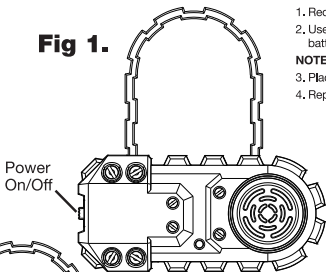 


Fig 2.

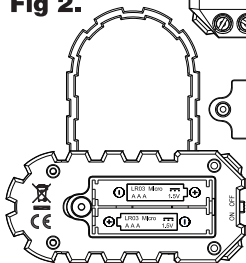 


Flexible Cable

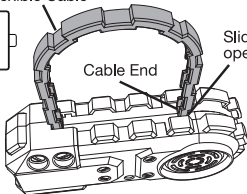 

Slide into open slot

Fig 3.

 Cable Storage Mode

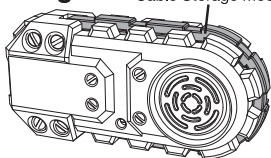

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: •Reorient or relocate the receiving antenna. •Increase the separation between the equipment and receiver. •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

•Consult the dealer or an experienced radio/TV technician for help.

WARNING:

Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



IF YOU HAVE ANY QUESTIONS, PLEASE CONTACT US AT
www.atomickmonkeyproducts.com/help

Product specifications subject to change.
SPYX Door Alarm 10535-IS-US R3



Night Nocs™

Day or Night Binoculars

Ages 6 & up
10399

Requires two AAA (LR03)
batteries, not included.

**Important: Please save this instruction sheet.
It contains valuable product information.**

How to play with your SpyX Night Nocs

TO USE THE SpyX Night 'Nocs as Daytime Binoculars

1. Look through the **EYEPIECES** and rotate the **FOCUS WHEEL** until the image becomes sharp.

To use the SpyX Night 'Nocs at night (Fig 1.)

1. Slide the switch that is on the left to turn on the Night Vision light
2. If you want to go super stealth, slide the switch on the right side which will engage the Red "Stealth" filter so you can avoid detection while still spying at night. You can switch it back to White LED light at any time by moving the switch back to its original position.

BATTERY SAFETY INFORMATION

- Only adults should install and replace batteries.
- Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode.
- Dispose of batteries safely.

ATTENTION ADULTS—TO REPLACE BATTERIES

SpyX Night "Nocs requires 2 AAA (LR03) batteries, not included.

1. Locate the battery compartment on the base of the Spy Night Scope. Use a small Phillips head screwdriver to loosen the screw, and remove the **BATTERY COVER** (Fig.2).
2. Remove all old batteries.
3. Place new batteries in compartment as shown
4. Replace the battery cover and tighten screw.

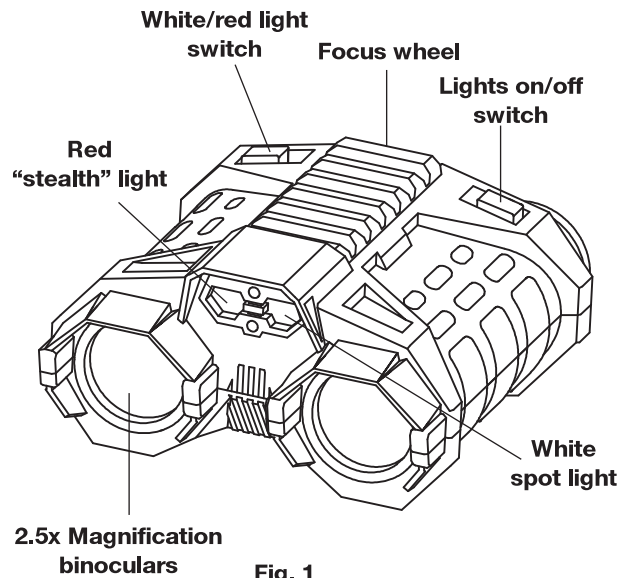 


Fig. 1

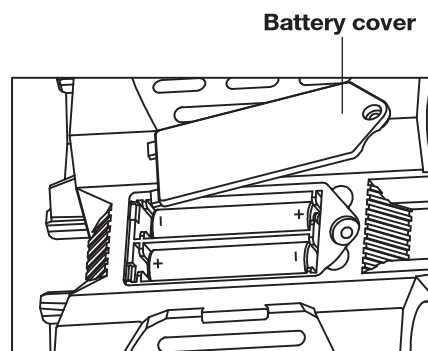 


Fig. 2

**CAUTION: Viewing the sun can cause permanent eye damage.
Do not view the sun with this product or even the naked eye.**

⚠ WARNING:

Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Product specifications subject to change.

NIGHT NOCS 10399-IS-US R3



IF YOU HAVE ANY QUESTIONS, PLEASE
CONTACT US AT
www.atomicmonkeyproducts.com/help



WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.



6-IN-1 SPY WATCH™

Complete multi-tool watch for spies™

Ages 6 and Up
10501
Requires One
(CR2016) button-cell
battery, included

Important: Please save this instruction sheet. It contains valuable product information.

TO SET NORMAL TIME, DATE, ALARM, & 24-HOUR DISPLAY

1. (Figure 1) Press the <A> MODE button three (3) times to enter setup mode. The Seconds mode will flash.
2. Press the <C> START button to reset Seconds to zero (0)
3. Then Press RESET button to cycle through each of the settings (Seconds, Hours, Minutes, Month, Day, Week, 12/24 hour Display)
4. For each setting, when it flashes, Press the <C> START button to increase the value.
5. When finished setting the Normal time Press MODE <A> to save and exit the Time setting mode.

TO USE THE STOPWATCH

1. When in the Normal Time Mode, Press <A> MODE button one (1) time. The ST Symbol will appear in top corner.
2. Press <C> START to start/ stop the timer.
3. When time is stopped, press RESET to reset time to zero.
4. When time is still running, press RESET to get SPLIT time.
5. Press <C> START to stop the timer then Press RESET to view SPLIT Time and TOTAL time

TO SET DAILY ALARM

1. When in the Normal Time Mode, Press <A> MODE button twice (2 times). The AL Symbol will appear in top corner.
2. Press RESET button to cycle through each setting (Hours & Minutes)
3. For each setting, when it flashes, Press the <C> START button to increase the value.
4. When finished setting the Daily Alarm Press MODE <A> to save and exit the setting mode.

TO USE THE DAILY ALARM

1. You can check to see if the Daily Alarm is set by looking for the  symbol on the top right corner of the Normal Time Display.
2. When Daily Alarm Sounds press any button to silence the Alarm
3. To activate/deactivate the Daily Alarm, Press <A> MODE button twice (2 times). The AL Symbol will appear in top corner. Then Press the <C> START button to toggle Alarm on or off. (the  symbol indicates it is on)

TO USE THE LED LIGHT

1. Press the LIGHT BUTTON (D) to activate the night vision spotlight

TO USE SAFE-DROP MESSAGE CAPSULES

1. Hide tiny messages inside the capsule, then hide them for you or your friends to find later!

TO USE THE SPY TELESCOPE

1. Flip up the SpyX Watch Face to reveal the Spy Telescope! (Figure 2)
2. With your finger press down on the ridge of the Telescope Lens to tilt up the lens. (do it for both lenses)
3. Lens B remains in place while Lens A can slide in and out. (Figure 3)
4. To magnify objects far-away. Look at the object through both Lens A and Lens B (HINT: Slide Lens A in and out to adjust the focus)
5. For close-up Magnification use only Lens B close to the Object you want to magnify
6. When you are done using the Telescope make sure to slide Lens A all the way back in and push both lenses back into the recessed space.

Figure 1

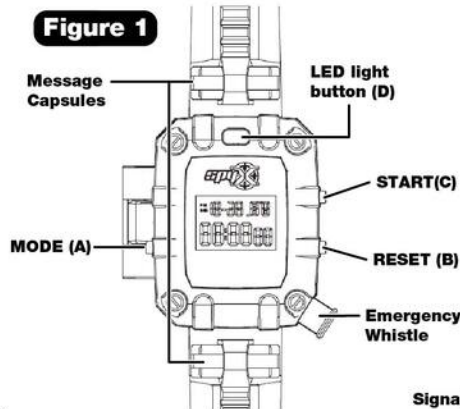 


Figure 2


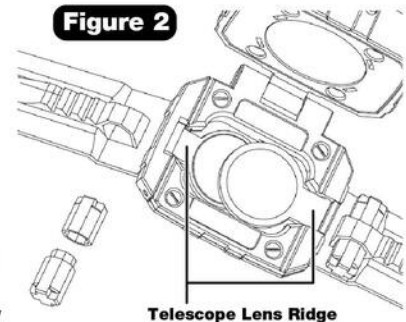 


Figure 3

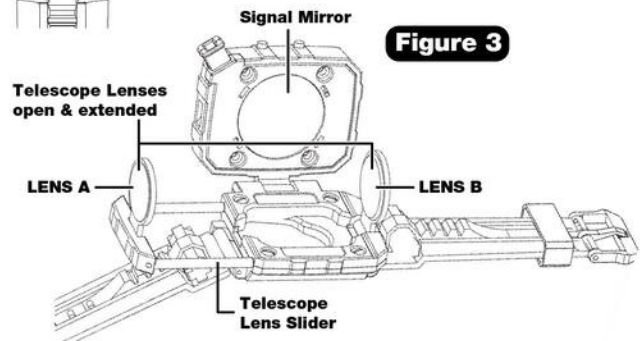 

ATTENTION ADULTS-TO REPLACE BATTERIES

 
The SpyX 6-in-1 Watch requires 1 (CR2016) 3V lithium button-cell, included.

1. Tilt up the watch face to reveal the Signal Mirror. (Figure 4) Loosen the 4 Philips-head screws on the Mirror Cover and remove.
2. Loosen the 2 SCREWS on the BATTERY CLIP Cover. Remove the battery and the clip together. REMEMBER which screws go in each cover
3. Unclip old battery. Install new battery with the + (positive) side up
4. Replace and screw the battery and clip assembly back into position.
5. Replace the Mirror Cover with the 4 screws. Be careful not to tighten it too much or you may damage it.

BATTERY SAFETY INFORMATION:

- Only adults should install and replace batteries. Do not recharge non-rechargeable batteries.
- Remove dead or exhausted batteries.
- Insert batteries correctly. Match positive and negative signs.
- The supply terminals are not to be short circuited.
- Do not use rechargeable batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only the batteries of the same or equivalent type recommended to be used.
- Do not dispose of batteries in a fire; they may explode. Dispose of batteries safely.

Battery Clip

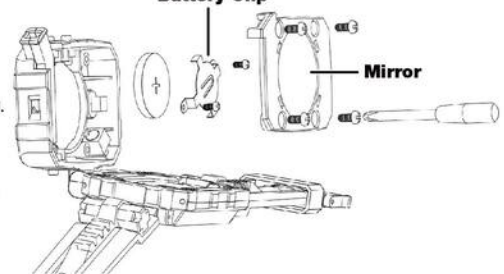

IF YOU HAVE ANY QUESTIONS, PLEASE
CONTACT US AT
www.atomicmonkeyproducts.com/help

 **WARNING:**
CHOKING HAZARD - Small parts.
Not for children under 3 years.

⚠ WARNING:

This product contains a coin battery. A coin battery can cause serious internal chemical burns if swallowed.

⚠ WARNING:

Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

⚠ WARNING:

Changes or modifications to these units not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

© 2020 Atomic Monkey Products, Ltd. Hong Kong, China. All rights reserved. PRINTED IN CHINA

Product specifications subject to change.

6-IN-1 SPY WATCH 10501-IS-US