



PL021A PENGUIN™ WATERPROOF PERSONAL MASSAGER Operating manual



Introduction

Feeling stressed? Prospera's PL021A personal massager delivers fast, effective relief with a high-grade motor and smooth vibration. Featuring 10 vibration modes and a flexible massage head, it adapts comfortably to your body. Made with FDA-approved medical-grade silicone, it's soft, safe, and skin-friendly. The IPX6 waterproof, rechargeable cordless design makes it easy to use and clean. Perfect for full-body relaxation—neck, shoulders, back, arms, and legs.

2

Product Specifications

- FDA approved silicone
- Applicable for Full-Body Use
- Working Modes: 10
- Vibration: 5500rpm±10%
- Working voltage: 3.7V
- Charging: 5V/1A
- Rechargeable battery: 1,800mA
- Charging time: ≈7hrs
- Using time: ≈5hrs
- Max noise level: <50dB
- Item weight: 0.8 lbs
- Main unit: 11.8" x 2" x 2"
- Box: 12.87" x 4.11" x 2.64"
- USB Charging
- Input: 5V 1A
- UPC 850073782149

2

Content

CONTENT

Safety Warnings-----	4
Product Illustration-----	4
Operating the Product-----	5
Consumer Warranty-----	6
Warranty Card-----	6


3

Safety Warnings

Consult your doctor before using this product if you have any lesions, skin conditions, heart issues, pacemakers, or other health-related concerns.

1. This product is intended for adult use only.
2. Do not let babies and children play with the product.
3. Do not use the product on an infant.
4. If you experience discomfort, stop using the product immediately.
5. Do not wash the unit using organic solvent such as thinner to prevent damage.

Product Illustration

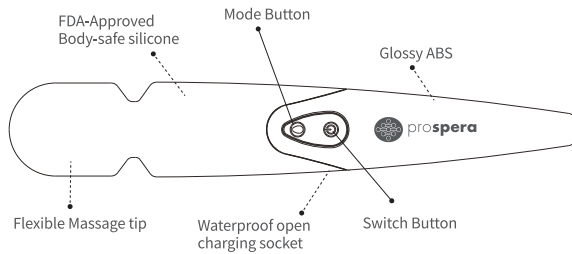


4

Operating the Product

GETTING START

1. Press the button to turn on the device.
2. Press the button to select your preferred mode (10 for option) and enjoy the massage.
3. Press the button to turn off the device.
5. Clean the massager with a damp cloth or rinse with water. **Do not soak in water.**

CHARGING INSTRUCTIONS

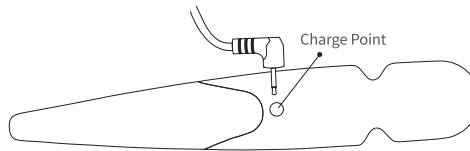

- When the vibration becomes weak or the device does not operate, please recharge it.
- Insert the DC plug into the DC port on the back of the massager (as shown).
- Plug the adapter into a wall socket.
- The LED indicator lights up to show charging in progress.
- When fully charged, the LED indicator turns off.
- The device cannot be operated while charging.

Recommend usage: daily

To order a new health and beauty product, please visit www.prosperacorp.com.

Use coupon code: PROSS5 for \$5 off any product above \$30.

5

Consumer Warranty

Prospera offers a 90-day standard warranty on massage products. Labor and parts are included during the warranty period. Please provide the model number and dated proof of purchase (sales receipt) when contacting Prospera for warranty service.

Non-warranty service is provided on a "per incident" basis. The consumer will verify that the product has failed and provide information for servicing the unit. All applicable repairs, parts, shipping, handling, local tax and "per incident" fees will be charged for non-warranty repairs and support calls.

Warranty Card



WARRANTY REGISTRATION FORM

PRODUCT NAME: _____

PRODUCT MODEL: _____ PURCHASE PRICE: _____

DATE OF PURCHASE: _____ RETAILER: _____

FIRST NAME: _____ LAST NAME: _____

ADDRESS: _____

CITY: _____ STATE: _____ ZIP: _____

PHONE: _____ EMAIL: _____

SIGNATURE AND DATE: _____

PLEASE MAIL TO:
 PROSPERA CORPORATION
 392 WEST LARCH RD SUITE 31
 TRACY, CA 95304-1644

TEL: (925)292-5978
 EMAIL: SALES@PROSPERACORP.COM

6

物料名称: E12-prospera说明书

印刷材料: 128g双面铜版纸

成品尺寸: 85.7x112mm

印刷工艺: 4C+4C印刷, 折页, 裁切